





Wooden Kitchen
Item 1388-UK / 1389-UK
Assembly instructions

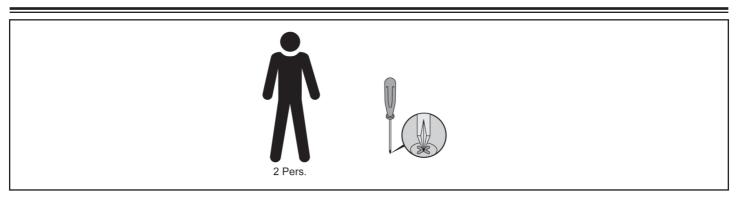

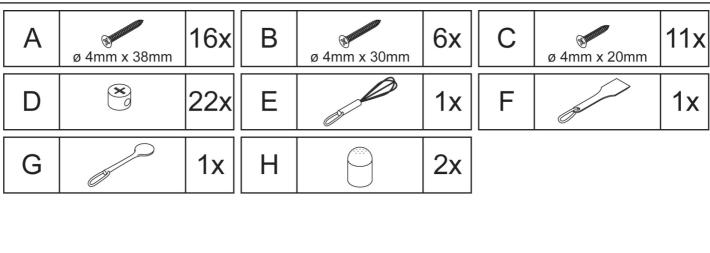

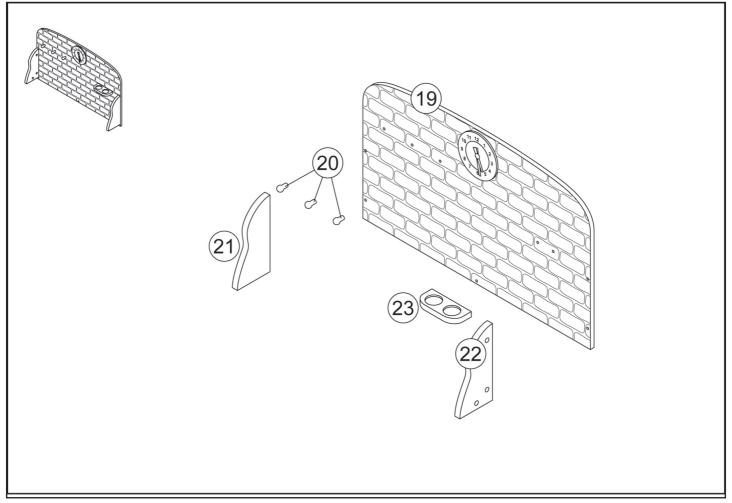

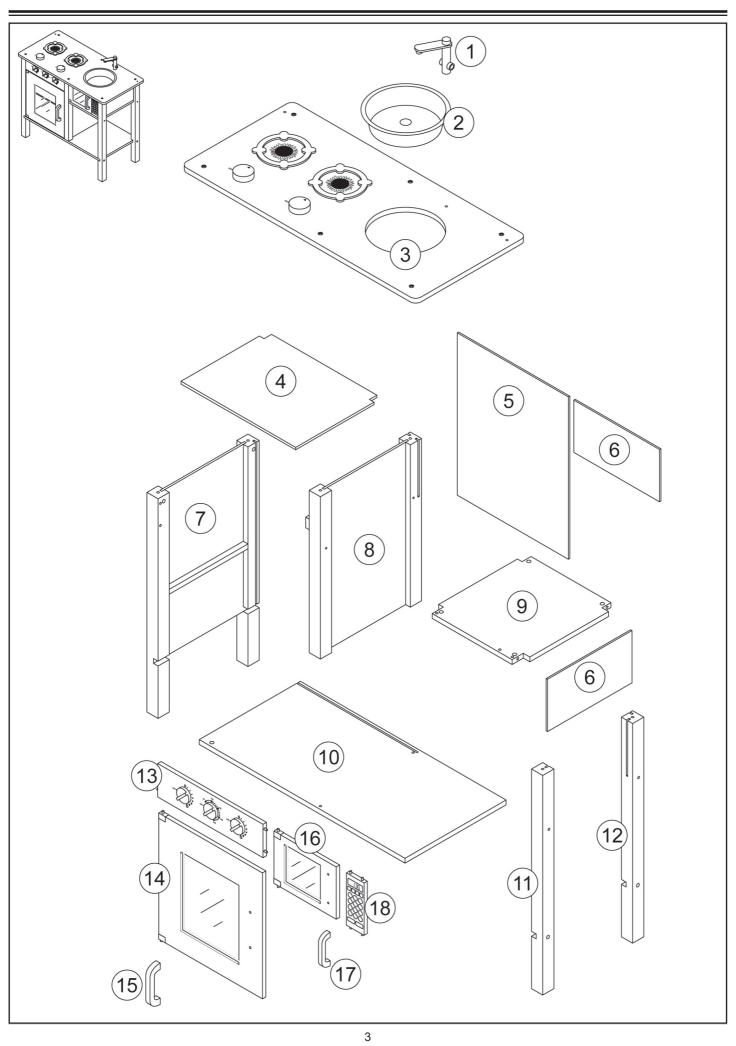

\triangle

WARNING!

The toy is to be assembled by an adult.

Make sure that your child only uses the wooden Kitchen for its intended purpose.



WARNING! CHOKING HAZARD-Small parts.

Not for children under 3 years.

For your safety

DANGER for children!

- The assembly of the wooden kitchen may only be executed by adults. Make sure that your child only uses the wooden kitchen within the scope of the intended functionality, with an avoidance of any improper use, for example, climbing onto the wooden kitchen.
- For the safe assembly, the item is delivered with a variety of small parts. These parts can be life-threatening if they are ingested. Therefore keep children away during the wooden kitchen assembly.
- Caution! Keep children away from the packaging material. The bags and foils are not toys. Make sure that these are not placed over the head, or parts thereof ingested. Risk of suffocation!

Caution, risk of injuries and property damage!

- · Make sure that all screw connections are properly tightened. Check them regularly. Do not overtighten the screws when tightening!
- Check the wooden kitchen as well as the accessories for damages or loose screws from time to time. In case of damages, the wooden kitchen or the accessories may no longer be used.
- The Wooden kitchen may only be used in the fully assembled state. Never let your child play with the wooden kitchen unattended.
- · Do not sit or stand your child or yourself onto the Wooden kitchen. It could tip over or get damaged.
- · Only use the Wooden kitchen for its intended purpose and do not overload it.
- The Wooden kitchen may only be used as intended. Do not perform any changes, or add any additional parts.

Caution!

- · Use only under the direct supervision of an adult.
- · Keep toys out of reach of children under 3 years of age.

Intended use

The wooden kitchen is suitable for indoor use - protect it from moisture.

The wooden kitchen is intended for the private household use, and not suitable for commercial purposes.

Cleaning and care

Do not use any abrasive or caustic cleaners or hard brushes etc. for the cleaning.

Clean the surfaces with a slightly damp and lint free cloth, then wipe down with a soft and dry cloth.

Unpacking and disposal

Carefully remove all the packaging materials and perform the disposal sorted according to the material. Make sure that you don't accidentally discard assembly material.

Dispose of the product after its service life in an environment-friendly manner at your local recycling collection point.

Dear Customer,

our products are subject to a strict quality inspection.

Should this product, contrary to our expectations, be defective or if you have any questions then please contact our in-house "customer service" department.

A guarantee only applies for material or manufacturing faults.

The guarantee expires with misuse and improper treatment and the use of force.

Please save this manual for possible future questions and contact!

Our service hotline:

Coemo GmbH

Bleichereistr. 35-37, D-73066 Uhingen, Germany

Phone: 07161 9149125 Email: info@coemico.de You can reach us:

Monday to Friday from 8:00 AM to 4:00 PM (GMT +1)

PRODUCED IN CHINA.

